# LFG Quickstart Guide - Windows DirectShow Driver

## 1) Fitting the Card

- 1. Take anti-static precautions.
- 2. Power off and open up the computer.
- 3. Please note: The LFG card is keyed so that it can only be fitted into a slot in which it will work. DO NOT modify the LFG card or the motherboard in an attempt to override the keying as this could result in serious damage.
- 4. PCI Express, PCI & PMC versions: Insert the LFG card into an appropriate spare slot.
- 5. PC/104-Plus version: See the "LFG Hardware Guide PC/104-Plus".
- 6. Close and power on the computer.

### 2) Installing the Driver

- Windows 98 (SE) / ME / 2000 / XP / Vista
- 1. If any previous Active Silicon LFG drivers have been installed, or any drivers for any other frame grabber using the same Bt878 chip, then it is recommended that you follow the uninstall procedure below, before installing the Active Silicon DirectShow driver.
- 2. The new hardware should be detected automatically as the machine boots up.
- 3. When prompted click 'Browse' and find "ASLLFG.inf" on the CD / Zip file.
- 4. Repeat this process until all the devices detected have been installed.

#### 3) Un-installing the Media Drivers

- Windows 98 (SE) / ME / NT 4.0 (SP6) / 2000 / XP / Vista
- 1. Run "Bt8xx\_Uninstaller.exe" on the CD / Zip file.
- 2. Follow the on screen instructions.

#### SUPPORT

	Europe	USA
Email:	lfg.support@activesilicon.com	lfg.support@activesilicon.com
Web:	www.activesilicon.com	www.activesilicon.com
Telephone:	+44 (0)1753 650600	+1 410-696-7642